


GN Netcom ADDvantage® Plus Series

How to use the ADP-I Monaural

This page contains instructions for adjustment of the headset for proper fit which is important to obtain optimum sound quality.

- A: Receiver with foam cover
- B: Microphone boom arm
- C: Microphone with foam cover
- D: Adjustable StayPut™ headband
- E: Support plate

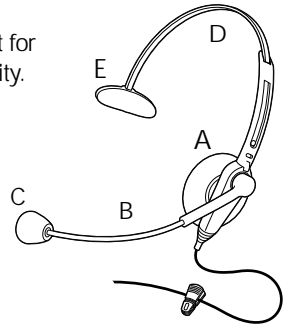

MONAURAL

1. The ADP-I headset can be worn on the right or left ear. Simply rotate the microphone boom down from the headband in the desired orientation. When changing the ADP-I headset to be worn on the opposite ear, rotate the microphone boom up towards the headband and over to the other side. DO NOT rotate microphone boom past the built-in stop points.
2. Put on the headset so that the headband rests lightly on your head. The headband can then be easily adjusted for proper fit.
3. Adjust the flexible microphone boom so that the noise canceling microphone is positioned $\frac{1}{2}$ ", approximately the width of your finger, below and away from your lower lip.
4. Adjust the position of the clothing clip and affix it to your clothing for comfortable, neat wearing.
5. Plug the GN Netcom Quick Disconnect into the Quick Disconnect provided with the GN Netcom amplifier or bottom cord that plugs into your phone. Place and receive calls according to the amplifier or telephone instructions.

Note: The ADP-1 headset is provided with foam covers over the receiver and microphone which can be replaced if they become soiled. The replacement part numbers are:

(#416231) Foam receiver cover for **ADDvantage Plus Series**

(#416488) Foam microphone windscreen for **ADDvantage Plus Series**

Contact your GN Netcom, Inc. distributor for replacement prices.

GN Netcom, Inc.

1-800-826-4656

77 Northeastern Blvd.
Nashua, NH 03062