


GN Netcom/Unex Optima-G Documentation

How to Use the OPG-2N Binaural Headset

This page contains instructions for adjustment of the headset for proper fit which is important to obtain optimum sound quality.

- A: Receiver with foam cover
- B: Microphone boom arm
- C: Microphone with foam cover
- D: Adjustable StayPut™ headband

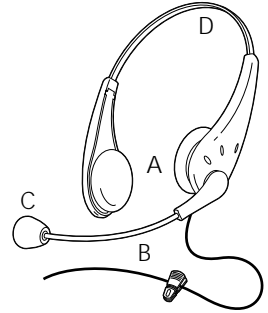

BINAURAL

1. The OPG-2N headset can be worn with the microphone on the right or left ear. Simply rotate the microphone boom down from the headband in the desired orientation. When changing the OPG-2N headset to be worn on the opposite ear, rotate the microphone boom up towards the headband and over to the other side. DO NOT rotate the microphone boom past the built-in stop points.
2. Put on the headset so that the headband rests lightly on your head. The headband can then be easily adjusted for proper fit.
3. Adjust the flexible microphone boom so that the noise canceling microphone is positioned $\frac{1}{2}$ " (approximately the width of your finger) below and away from your lower lip.
4. Adjust the position of the clothing clip and affix it to your clothing for comfortable, neat wearing.
5. Plug the GN Netcom Quick Disconnect into the Quick Disconnect on the GN Netcom brand amplifier or bottom cord that plugs into your phone. Place and receive calls according to the amplifier or telephone instructions.

Note: The OPG-2N headset is provided with foam covers over the receiver and microphone which can be replaced if they become soiled. The replacement part numbers are:

- (#416413) Foam receiver cover for Optima-G headsets
- (#416376) Foam microphone windscreen for Optima-G headsets

Contact your GN Netcom/Unex distributor for replacement prices.



GN Netcom/Unex Inc. • 77 Northeastern Blvd. • Nashua, NH 03062 USA
Tel. 1-800-826-4656 • www.gnnetcom.com